MAAX®

Installation instructions
CORNER BATHTUB SKIRTS
102741, 102727, 102734, 105408

IN CASE OF PROBLEMS

If you have any problems with our product, **DO NOT CALL THE STORE**. Contact one of our customer service representatives at **1-888-304-4388**. Our experts can advise you and will do all they can to resolve your problem diligently. The necessary parts will be sent to you immediately. **There is no warranty on the installation**, but if you have any problems, we will be happy to render assistance.

1. PREPARATION

Install the wood pieces under the flange of the bathtub using silicone, as shown in Fig. 1.

ALLOW TO DRY FOR 24 HOURS.

It is essential that the bathtub be perfectly level in order not to interfere with apron installation. Check the level on both axis as illustrated in Fig. 1. If necessary, place shims under the wooden base of the bathtub. For more details, refer to the ***installation and user's guide for bathtub 10012137***.

Complete wall finishing BEFORE installing the apron to allow easy removal. If necessary, cut the apron as required using a styrene knife.

Secure vertical supports in front of the bathtub; leave a space in front of the support so as not to interfere with the installation of the apron. Make sure the vertical support does not press on the jets or piping. Incline the support as required to allow easy installation.

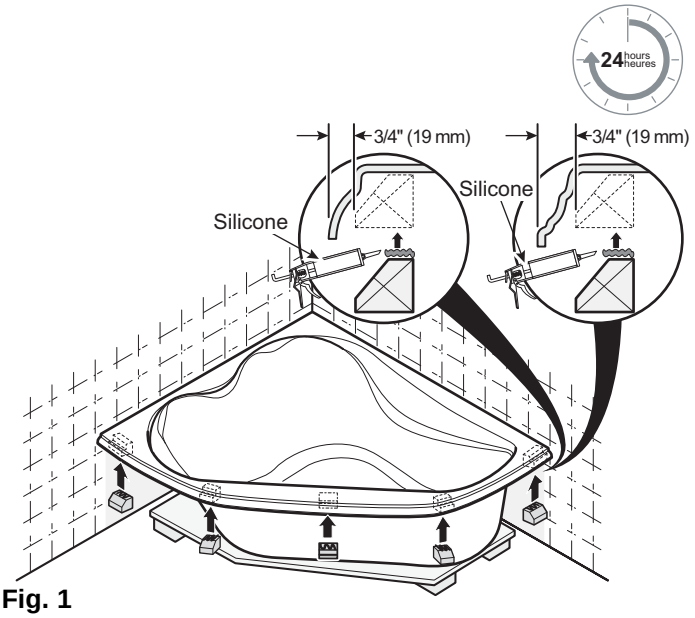

Fig. 1

2. REFERENCE LINES

Using a level or plumb line, trace, on the floor, a line coinciding exactly with the front edge of the bathtub (*Line A*).

Trace a second line, parallel to *line A*, at a distance of 2" (51 mm) inside *line A* (*Line A'*). Fig. 2.

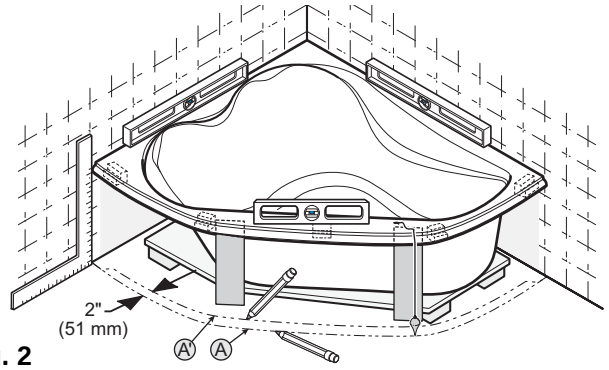

Fig. 2

3. KICKPLATE INSTALLATION

Place the kickplate on the floor and align it with *line A'* previously drawn. **Note:** the kickplate extremities must be aligned with *line A*. Drill 3/16" holes through the kickplate fastening flange. Fix the kickplate to the floor using #8 x 5/8" screws. Fig. 3.

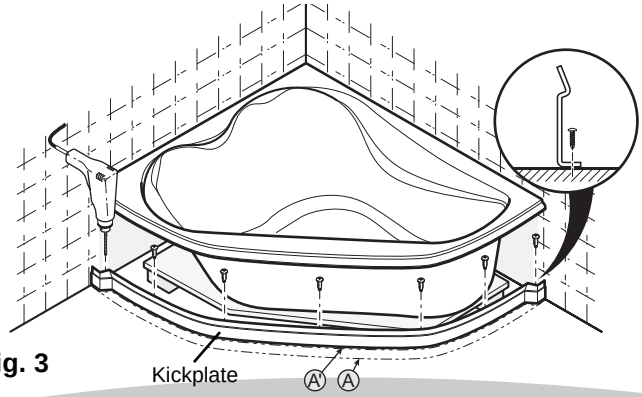

Fig. 3

© MAAX Canada Inc., 2007

4. APRON INSTALLATION

Using a level or plumb line, trace, on the wall, a line coinciding exactly with the front of the kickplate (*Line B*).

Trace a second line, parallel to *line B*, at a distance of **1/2" (13 mm) <u>inside</u>** *line B* (*Line B'*). Fig. 4.

Install a wood bloc on the wall, aligning its front edge with *line B'*.

Trial install the apron and adjust the kickplate and wood bloc position as required. Remove the apron.

Drill 3/16" holes in the bottom of the apron fastening flange. **Do not drill through the kickplate**. Install the apron by sliding the upper edge of the apron under the edge of the bathtub. Fix the apron to the kickplate using the #8 x 5/8" self-drilling screws and screw cap receivers. Install the screw caps. Fig. 5.

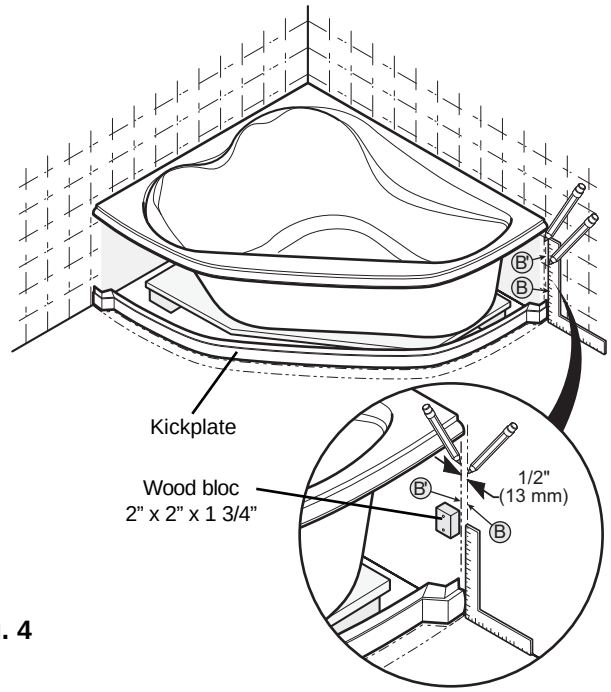

Fig. 4

Description	Part No.	Qty
Hardware bag	10020110	1
#8 x 3/4" (19 mm) screw	10017646	8
#8 x 3/4" (19 mm) self-tapping screw	10002835	10
Screw cap	10048084-003	10
Screw cap receiver	10002880	10
Wood piece	10005184	5

*Items included with hardware bag

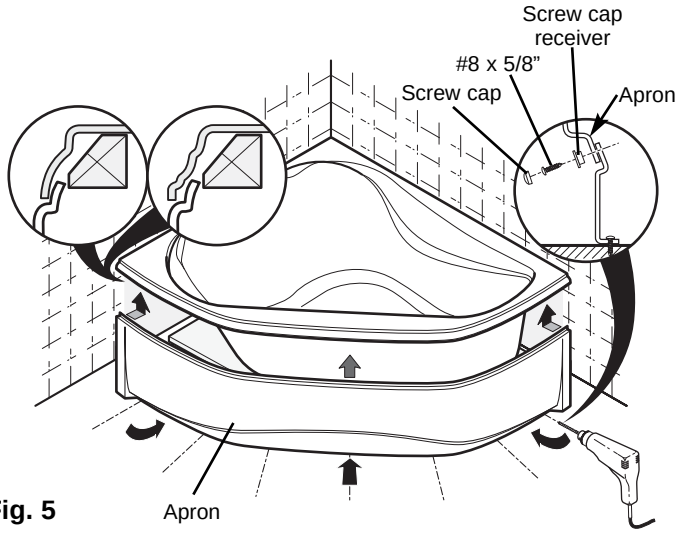

Fig. 5

MAAX is a registered trademark of MAAX Canada Inc.